



TRU-FRAME®
A name you can build on.

REPLACE-ALL™ ADJUSTABLE SLIDING SCREEN DOOR INSTALLATION INSTRUCTIONS

The only tool you will need to install your REPLACE-ALL™ is a Phillips head screw driver.
This will be used on screws for adjustment channels and for mounting the latch strike plate.

STEP #1 - Loosen the four screws in the top and bottom adjustment channels.

STEP #2 - Place top of REPLACE-ALL™ in the header slot (Figure A) or on fin (Figure B). Be sure handle latch is facing inside of room. Then lift bottom of door and place wheels on bottom track.

STEP #3 - Slide REPLACE-ALL™ in closed position and tighten both screws on the bottom channel.

STEP #4 - Lower the top channel slightly until REPLACE-ALL™ slides freely, then tighten top screws.

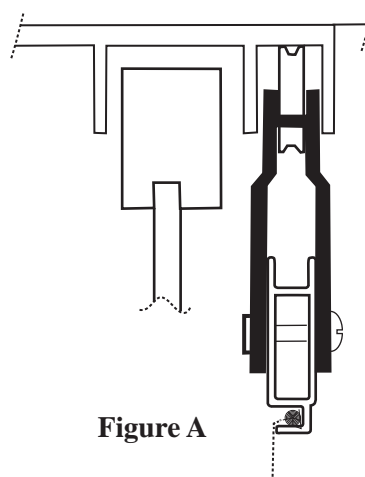


Figure A

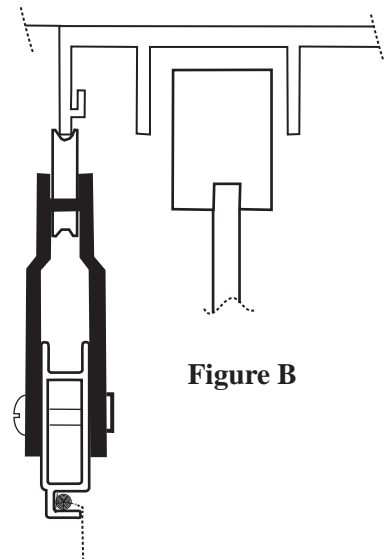


Figure B

STEP #5 - If the bug-sweep provided is too wide, then tear off excess as shown. (Figure C)

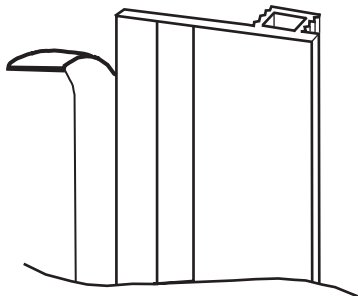


Figure C

STEP #6 - Secure the strike plate to existing door jamb as shown (Figure D). It can be adjusted up or down so as to catch the REPLACE-ALL™ latch.

NOTE: DEPENDING ON WHICH DIRECTION YOUR DOOR SLIDES, THIS ILLUSTRATION MAY NEED TO BE REVERSED.

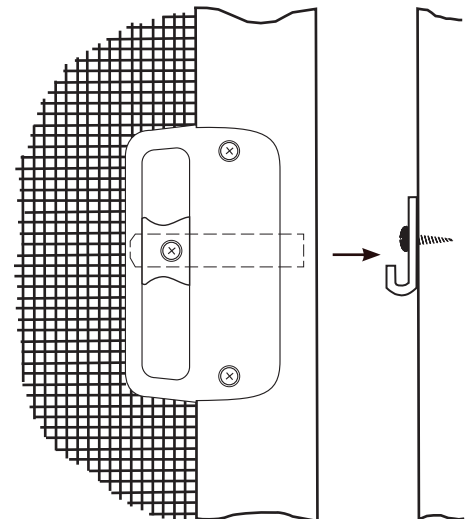


Figure D

CARE & MAINTENANCE

Your REPLACE-ALL™ Screen Door should be cleaned as necessary with a mild soap and water solution. The wheel assemblies are designed so as not to need lubrication. Any parts which may wear out or be damaged can be purchased from your TRU-FRAME® dealer.